Descri	ption	Condition
MODEL CONNECTION LOST		ALARM
	LOI	NGHORN AND NH3 PIPELINE ONLY
Indicates	The SCADA system acts as a watchdog for PLDS. If SCADA does not detect the PLDS heartbeat, connection, or does not receives requests for data (poll timeout) it triggers Model Connection Lost ALARM. The SCADA checks both servers LDS1 and LDS2.	
Response	Note: Longhorn Mitigation Plan requires a controlled shutdown within 30 minutes if the SCADA system experiences any outage that results in a total loss of leak detection capability, or a diminished capability of the system to detect leaks.  1. Notify the Leak Detection Analyst.  2. Document in Logmate.	
Retu	n to ALARM TABLE	NAVIGATOR - PRIORITY 1, PRIORITY 2 or PRIORITY 3
Descri	ption	Condition
PRESSURE		EXCEEDED
MOP +10% E		SHUTDOWN
Indicates	An <u>Abnormal Operating Condition</u> . Pressure has exceeded 110% of MOP. Operations Control or Field management is responsible for preparing an abnormal condition report and determining whether a safety-related condition report is necessary per the DOT. The line cannot be restarted without approval from Field management, Operations Control management and the Manager of Asset Integrity. After approval, restart the line and, if necessary, perform a successful 30 minute pressure test before returning the line back to normal operation.	
Response	<ol> <li>Perform a Code Red Shutdown per the <u>9.02-ADM-002 Startup and Shutdown</u>.</li> <li>If after shutdown, an abnormal or unexpected pressure drop occurs then proceed to <u>9.02-ADM-011 Emergency – Code Red – Investigation Event</u></li> <li>Contact the Operations Control supervisor.</li> <li>Notify the field personnel to visually inspect the location(s) where the pressure over 110% was recorded.</li> <li>Document in Logmate as an AOC.</li> </ol>	
Retu	rn to ALARM TABLE	NAVIGATOR – PRIORITY 1, PRIORITY 2 or PRIORITY 3
Descri	ption	Condition
MOP T	IMER	EXPIRED
Indicates	An Abnormal Operating Condition. Pressure has been at or above MOP for longer than 1 minutes.	
Response	<ol> <li>Take pressure reducing action to bring the line segment below MOP. This may include Shutting down the nearest upstream unit from the affected pressure.</li> <li>Document in Logmate as an AOC.</li> </ol>	
Del	to ALADM TABLE	NAVIGATOR – PRIORITY 1, PRIORITY 2 or PRIORITY 3

[	Description	Condition
PEDERN	ALES RIVER FLOW	HI-HI
Indicates	The flow of the F	Pedernales River has reached 100,000 cfs.
	1. Immediately	perform a Normal Shutdown.
	2. Isolate this s Eckert Statio	ection of the pipe by closing MLBV's at Cedar Valley, Pedernales River and on.
Peanana	3. Notify Longh line shutdow	orn Area Manager, Operations Control Supervisor and the scheduler of the
Response	4. When river was pipeline for a	relocity recedes below 100,000 cfs notify Field Personnel to inspect the damage.
		ng verbal confirmation from Field and Operations Control Supervision, the be restarted.
	6. Document in	Logmate.
	Return to ALARM TABLE NAVIGATOR - PRIORITY 1, PRIORITY 2 or PRIORITY 3	

Description		Condition	
PLANT FAULT (AGRIUM/KOCH)		FAULT	
Indicates	NH3 refrigerated storage has gone down. This alarm may initiate a drop check at the location.		
Response	<ol> <li>Call the technician responsible for operation the location to investigate.</li> <li>Document in Logmate.</li> <li>Once the investigation is complete, the Drop Check has been lifted (if applicable) and the alarm cleared, the line may be restarted.</li> </ol>		
Return t	o ALARM TABLE	NAVIGATOR – <u>PRIORITY 1</u> , <u>PRIORITY 2</u> or <u>PRIORITY 3</u>	
Description	on	Condition	
PLD	S	EMERG-LO	
	A system in	dication of a line integrity anomaly, requiring investigation.	
Indicates	<b>Note:</b> The Longhorn Mitigation Plan requires a controlled shutdown and isolation of t Longhorn pipeline within 5 minutes of the indication.		
Response	2. Investig 3. Notify the a. If a pro Investig b. If a the	an Investigation Event Shutdown per the 9.02-ADM-002 Startup and Mn.  The state line integrity via trends and event records.  The Supervisor or Leak Detection Analyst (LDA).  The shutdown, an abnormal or unexpected pressure drop occurs, then ceed to Emergency Code Red Procedure in Emergency Code Red—estigation Procedure event.  The shutdown, the Supervisor or LDA investigation indicates a false alarm, in the Supervisor or LDA may approve restarting the line.  The sent in Logmate. Classify the cause as a "Data Failure", or an "Irregular ing Condition", or as a "Possible Commodity Loss".	

De	escription	Condition
PRESSURE		A/D-FAIL
Indicates	Pressure reading is outside s abnormal.	cale indicating a device problem or line conditions may be
Response	malfunction.  2. If this is a true pressure a verify that pressure did n assume that the pressure a. Perform a Code Red b. Contact Operations (c. Notify the field person 110% was recorded.  I. Operations (c. Abnormal condition reports)  II. The line can Operations (c. After approval, restar pressure test before e. Document in Logman 3. Continue operations if the and the alarm has cleared a. Notify appropriate field Control Supervisor, rethe line if there are palarm.  b. If the malfunctioning	Control or Field management is responsible for preparing an indition report and determining whether a safety-related port is necessary per the DOT.  Into the restarted without approval from Field management, Control management and the Manager of Asset Integrity. In the line and, if necessary, perform a successful 30 minute returning the line back to normal operation.  It is an AOC.  It is a device malfunction and the management of the ma
	c. Document in Logma	
Returi	n to ALARM TABLE NAVIGATO	DR - PRIORITY 1, PRIORITY 2 or PRIORITY 3

1.00 100	PRIORIT	TY 1- ALARM	
	Description	Condition	
	PRESSURE	HIGHHIGH	
suc	TION or DISCHARGE or CASE		
Indicates	A pressure reading exceeded a HI-HI parameter placed in the SCADA database. Generally, these parameters are set at 10psi above the maximum discharge pressures as listed in the <a href="Pressure Settings">Pressure Settings — Maximum Pressure Charts</a> , or at device pressure limits. This alarm can be activated during transient conditions and is acceptable per DOT for lines in transition.		
Response	<ul> <li>a faulty instrument.</li> <li>If the alarm is verified then take in a. Determine cause of high preshigher than normal pressures.</li> <li>If alarm persists for greater the pressure.</li> <li>If a transmitter is not scaled to 110 device Clamping. This could indice Supervisor should be notified imm</li> <li>If the pressure exceeded 110% of then follow the MOP + 10% EXCE</li> <li>If the pressure did not exceed 11 following actions: <ul> <li>a. Acknowledge the alarm and of shutdown surges, and quickly</li> <li>b. Reduce set point if necessary alarm is the result of normal of abnormal condition.</li> </ul> </li> <li>If the alarm is suspected to be the cleared, take the following actions <ul> <li>a. Notify appropriate field person Control Supervisor, record in line if there are sufficient function remotely isolated.</li> <li>b. If the malfunctioning transmitt operate a pumping unit on that c. If the incoming pressure device are accurate flow readings.</li> </ul> </li> <li>7. Document in Logmate.</li> </ul>	an 10 minutes shut down appropriate pumps to reduce 0% of MOP a HI-HI alarm will be received followed by ate a potential over-pressure and the Operations Control rediately.  If the maximum operating pressures as listed in SCADA, EEDED ALARM.  In the maximum operating pressures take the continue operations if the alarm is the result of startup or reclears. This is not an abnormal condition.  If a cknowledge the alarm and continue operations if the control valve or unit controller fluctuations. This is not an account of a device malfunction, and the alarm has not as:  In the request the point be inhibited by the Operations Logmate and Turnover Sheet and continue operating the tional pressure devices within each segment that can be seen is a discharge pressure transmitter, you may not	

PRIORITY 1- ALARM			
	Description Condition		
	PRESSURE	LOWLOW	
Indicates	A pressure reading has dropped below acceptable minimum range. This is generally associated with NGL and NH3 pipelines and relates to vapor pressure.		
Response	<ul> <li>a faulty instrument.</li> <li>2. If due to faulty equipment: <ul> <li>a. Notify appropriate field persor</li> <li>b. Request the point be inhibited</li> <li>c. Record on Turnover Sheet are functional pressure devices.</li> <li>d. Document in Logmate.</li> </ul> </li> <li>3. If the alarm is accurate: <ul> <li>a. On an active pipeline, take impressing) range.</li> </ul> </li> </ul>	d by the Operations Control Supervisor and continue operating the line if there are sufficient simediate action to increase pressure to acceptable (alarm essure the pipeline to per 9.02-ADM-002 Startup and	
	Return to ALARM TABLE NAVIGATOR	- PRIORITY 1, PRIORITY 2 or PRIORITY 3	

11/1/19/19	PRIORITY 1- ALARM		
	Description	Condition	
RELIEF LPMR RELIEF		RELIEF	
	RELIEF TIMER	ON	
	An <u>Abnormal Operating Condition</u> . Operation of a Safety Device (overpressure protection system). Relief systems are designed to protect from overpressure conditions in the event of line blockage.  Note: At some locations, if a relief flow timer alarm has been active for more than 5 minutes		
Indicates		ition in progress), the alarm-associated mainline valve at	
indicates	Barnsdall.	ites: St. Charles, Lincoln, Doniphan, Rosemount and	
	<b>Note:</b> At Pine Bend, the unit being fed by the relieving line will automatically shut down (programming) and the Controller will perform a Code Red Shutdown per <u>9.02-ADM-002</u> and <u>Shutdown</u> on any other units running at the time of the event.		
Response	<ol> <li>Perform a Code Red Shutdown per <u>9.02-ADM-002 Startup and Shutdown</u>.</li> <li>Notify Field Personnel.</li> <li>Document in Logmate as an AOC.</li> </ol>		
	Return to ALARM TABLE NAVIGATOR	- PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description Condition		
	REMOTE CABINET	FAIL	
Indicates		Cabinet. This can result in the lost ability to send etc.) that is wired into the affected cabinet.	
Response	<ol> <li>Immediately notify Field Personnel.</li> <li>If operations dictate a command to be sent to the location, try the command with the expectation that it may not work. If command does not work, take precautionary actions to limit safety and/or contamination events from happening.</li> <li>Document in Logmate.</li> </ol>		
	Return to ALARM TABLE NAVIGATOR	R – <u>PRIORITY 1, PRIORITY 2</u> or <u>PRIORITY 3</u>	

PRIORITY 1- ALARM		
	Return to ALARM TABLE NAVIGATOR	PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
	ROCK OVER PRESSURE ROCK 8" ESD	ALARM ALARM
Indicates	Regulating Valve which begins to control of more than 425psi it drops a relay tha High Pressure Alarm along with an ESI  1. Perform a Code Red Shutdown per	er 9.02-ADM-002 Startup and Shutdown.
Response		by the operator the line can be restarted.
	Return to ALARM TABLE NAVIGATOR	PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
	SAFETY FAULT	FAULT
Indicates	Safety related equipment has failed (fire	e eye, transmitter failure, gas detector, etc)
Response	<ol> <li>Immediately call the location or apple.</li> <li>Monitor location for additional information.</li> <li>Document in Logmate.</li> </ol>	propriate technician for the location. mation supporting a possible safety concern.
1	Return to ALARM TABLE NAVIGATOR	PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
	SEAL FAIL	DETECTED
Indicates	a leak. This condition is reported as ar	ion. A seal on a piece of equipment may have developed a AOC if the Alarm is verified as True, and if the product e. This will have to be confirmed with the field.
<ol> <li>Shutdown operations of that device or any operation that could contribute to the leak from the device.</li> <li>Notify the appropriate field personnel.</li> <li>Do not restart operations of the alarming device until the appropriate field personnel have investigated and given clearance to restart the equipment.</li> <li>Document in Logmate as an AOC. Identify if the product passes beyond the containment device.</li> </ol> NOTE: NH3 Locations see step 7 Investigation Event in 9.02-ADM-011 Emergency – Code Red – Investigation Event.		

and with	PRIORIT	Y 1- ALARM
	Description	Condition
SEGN	MENT/SYSTEM DISTURBANCE	ROC +/-
Indicates	The following changes are a signature r drops, destination flow rate drops.	elease: source flow rate rises, source discharge pressure
Response	Analyze and Verify.     Perform an Investigation Event Shutdown per <u>9.02-ADM-002 Startup and Shutdown</u> .     Immediately Notify Operations Control Supervisor.	
	Return to ALARM TABLE NAVIGATOR -	- PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
	STATION	ACTIVE
Indicates	One of many potential problems at a fie	eld location (e.g. low air, engine room temperature drop).
Response	<ol> <li>Notify the appropriate field personnel, take actions directed, and monitor location.</li> <li>Document in Logmate.</li> </ol> Note: If station air is the cause of the alarm, mainline diesel units could shutdown on loss of air.	
	Return to ALARM TABLE NAVIGATOR -	PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
	SUMP EXCESS RUNTIME	ACTIVE
Indicates	Indicates the sump has run for too long a result of this alarm.	. Personnel should always be summoned to the facility as
Response	<ol> <li>Notify Field Personnel</li> <li>Notify Control Center Supervisor.</li> <li>Document in Logmate.</li> </ol>	
	Return to ALARM TABLE NAVIGATOR	- PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
SUM	IP PUMP EXCESSIVE STARTS	ACTIVE
Indicates	Indicates that the sump has run severa	I times on and off in a short period of time.
Response	<ol> <li>Notify Field Personnel.</li> <li>Notify Control Center Supervisor.</li> <li>Document in Logmate.</li> </ol>	

	PRIORITY 1- ALARM		
	Return to ALARM TABLE NAVIGATOR -	PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description Condition		
	TANK * * COMM FAIL	ALARM	
Indicates	There has been a communication failur will show on the affected tank and the t	e with a tank gauge. When this happens a discrete alarm ank will be backlit in blue.	
	Immediately notify field personnel to investigate the alarm.		
	2. If the tank is being delivered into, s	witch out or shut down until alarm can be cleared.	
Response	3. If the tank is not being delivered into, but another delivery is occurring into the station, the line does not have to be shut down.		
	Return to ALARM TABLE NAVIGATOR -	- PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description	Condition	
	TANK EMERGENCY	E-HIHI	
		SOLES 5-6	
Indicates	High-High Alarms are a hard wired device mounted on the tank to provide a distinct separate device to indicate the possibility of overfilling.		
	Immediately call the location of the High Level Tank Alarm to verify alarm. If the alarm can immediately be verified false by an operator manning the station, then continue to run the line as long as the alarm is actively being cleared and the location continues to be manned.		
		by the location. If operations do not allow you to switch per the Startup and Shutdown Procedure.	
Response	<ol> <li>If no one answers or the alarm cannot immediately be verified false or the location is unmanned, perform a Code Red Shutdown per 9.02-ADM-002 Startup and Shutdown.</li> <li>Contact appropriate field personnel at the location immediately.</li> <li>Do not resume operations into the affected facility until the alarm has been cleared or location has verified a false alarm.</li> <li>Document in Logmate as an AOC.</li> </ol>		
	Return to ALARM TABLE NAVIGATOR	- PRIORITY 1, PRIORITY 2 or PRIORITY 3	

PRIORITY 1- ALARM		
	Description	Condition
	TANK HIGH PSI	HIGH
Indicates	Bullet storage tanks pressure is high.  A possible Abnormal Operating Condition	on or device malfunction.
Response	alarm clears immediately and can station—then you may continue to actively being cleared and the local.  If no one answers or the location is a Contact appropriate field personned.  Do not resume receive operation has verified a false alarm.  Document in Logmate as an AOC.  Return to ALARM TABLE NAVIGATOR.	s unmanned, switch out of location immediately. el for the location immediately. until the alarm has been cleared and the location PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description Condition	
	*LOC*.*TANK #*.TANK	LO-LO
Indicates	A low level condition which is below no	rmal bottom. This alarm is generated by SCADA. Tank is ntinue beyond this level, vapors likely no longer contained
Indicates	A low level condition which is below no below allowable levels, if allowed to co and potential air permit violation has or lift the alarm is not the expected result of	rmal bottom. This alarm is generated by SCADA. Tank is national beyond this level, vapors likely no longer contained courred.  If a deliberate manned operation: with the specific tank or switch operations to another tank. sonnel immediately.

, the sec	PRIORI	TY 1- ALARM
	Description	Condition
	TOXIC GAS	ALARM
		NH3
Indicates	toxic vapors. These gas detector switch rack. There are two gas concentration concentration level, the Toxic Gas Alar higher concentration levels, all units wi	Gas Alarm occurs when a gas detector switch senses hes are commonly installed around the pump and loading levels that the detector switch will sense. At the lower m will be generated but the units will not lock out. At Il lock out and the Controller will receive a lockout alarm down Alarm if that discreet point was not already in an
Response	<ul> <li>alarm is verified – proceed to 9.02  <u>Event</u>. If the alarm is a verified fallong as the alarm is actively being</li> <li>If no one answers at the location, Startup and Shutdown Procedure is not a Toxic Gas Shutdown Alar deliveries are closed off.</li> <li>Notify field personnel.</li> <li>Notify Enterprise Pipeline Compa</li> <li>If field personnel verify alarm is trepresely investigation Event procedures.</li> <li>Document in Logmate as an AOC</li> </ul>	rue, follow 9.02-ADM-011 Emergency-Code Red-
	Return to ALARM TABLE NAVIGATOR	- PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
	TOXIC GAS – SHUTDOWN	ALARM NH3
A possible leak at the location. A Toxic Gas Alarm occurs when a gas detector switch senses toxic vapors. These gas detector switches are commonly installed around the pump and loading rack. There are two gas concentration levels that the detector switch will sense. At the lower concentration level, the Toxic Gas Alarm will be generated but the units will not lock out. At higher concentration levels, all units will lock out and the Controller will receive a lockout alarm and will also receive a Toxic Gas Shutdown Alarm if that discreet point was not already in an alarm state.		
Response	alarm is verified – proceed to 9.0  Event procedure. If the alarm is a the line as long as the alarm is a	ne toxic gas alarm to verify alarm. If a toxic gas 12-ADM-011 Emergency-Code Red-Investigation a verified false alarm – then you may continue to run ctively being cleared and the location is manned.  The perform and Investigation Event Shutdown per 12.

PRIORITY 1- ALARM			
	<ol> <li>Notify Enterprise Pipeline Company if this is a shared facility.</li> <li>If field personnel verify alarm is true, follow <u>9.02-ADM-011 Emergency-Code Red-Investigation Event</u> procedures.</li> <li>Document in Logmate as an AOC.</li> </ol>		
	NOTE: NH3 Locations see step 7 Investigation Event in 9.02-ADM-011 Emergency – Code Red – Investigation Event.		
	Return to ALARM TABLE NAVIGATOR -	- PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description	Condition	
\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	VALVE (#) PSI REVERSAL	PSI INHIBIT	
Indicates	A PRS (Pressure Reversal Switch) has been activated for the associated valve. PRS are installed on certain valves in the system (noted with a white arrow below the valve) and use programmed logic to open valves at a preset pressure to eliminate overpressure on the mainline, mitigating surge circumstances.  Note: A PRS is not an actual physical switch, it is programming.		
Response	<ol> <li>Immediately discontinue activity on the associated line.</li> <li>Perform a Normal Shutdown per the <u>9.02-ADM-002 Startup and Shutdown</u>.</li> <li>Investigate for and correct inadvertent valve closure or line up errors.</li> <li>Notify the appropriate field personnel.</li> </ol>		
	5. Document in Logmate as an AOC.		
	Return to ALARM TABLE NAVIGATOR	PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description	Condition	
	UNAUTHORIZED ENTRY – NH3 ACTIVE UNAUTHORIZED ENTRY – HIGH VOLT LOSS ACTIVE		
Indicates	Facility has been entered (or tampered with) and the alarm was not de-activated.		
Response	1. Immediately notify a technician to investigate     2. Use camera surveillance if available.		
	Return to ALARM TABLE NAVIGATOR – PRIORITY 1, PRIORITY 2 or PRIORITY 3		

	PRIORI	ITY 1- ALARM
	Description	Condition
UNCMDCHG		STOP, START, ON, OFF, OPEN, CLOSE, ERROR
Indicates	Event has occurred outside of SCADA "Status of unit or valve has changed." This usually occurs when location personnel have control of the unit or the valves.	
Response	line rupture.  b. When a unit goes down unexp signs of a line rupture and also condition.  c. If the line is in an overpressure take further action to minimize 1. Shutdown one or more up originating unit in success 2. Close a valve upstream of over pressured. Care must does not create its own up 3. If possible, open a valve if overpressure concern are aren't over-pressured, tandestroyed.  d. If line operating limits were not the unit and monitor closely up 1. If unit does not start after 1. If not already open; open if a relief alarm, HIGH lev 1. If not already open; open if a relief alarm, HIGH lev 1. Shutdown the upstream is means flow will stop in the affected unit continue 1. If the unit does not shutdown of upstream station to alleviate the poss 1. C. Call field personnel to manual 1. Conduct two-way vocal common reasons for the unintentional 1. The power source for the unitentional 1. The unit may not be returned 1. The unit may not be returned 1.	of the section of line that the Controller believes might be used in this instance to ensure that this valve closure pstream overpressure condition.  Into a tank either upstream or downstream of the ea. Care must be taken to ensure low-pressure manifolds anks are not overfilled and if possible product quality is not exceeded, the event is not an AOC. In such case, restart intil steady state is achieved.  In the first attempt contact appropriate field personnel.  First attempt contact appropriate field personnel.  First avalve downstream into a tank to create a flow path even well tank alarm or contamination situation would occur. If this is the line, a potential exists for overheating and possible fire if eas to run with no flow.  In low suction, the controller may consider restarting the sibility of the unit overheating.  In ally shutdown the unit and inspect the affected location(s). In the control of the personnel to determine

#### **PRIORITY 1- ALARM**

- g. Document the event in Logmate as an AOC.
- 3. Unintended Valve Closure:
  - a. Attempt to reopen the valve.
  - b. If the attempt in not successful, perform a Code Red Shutdown per the <u>9.02-ADM-002</u> Startup and Shutdown.
  - c. Call out field personnel to investigate.
  - d. Conduct two-way vocal communication with the appropriate personnel to determine reasons for the unintentional valve close.
  - e. The power source for the valve must be locked and tagged out in open position before the pipeline can be used again.
  - f. The valve may not be returned to service until a review of the problem has been completed by the Operations Control and field management.
  - g. Document in Logmate as an AOC.
- 4. Unintended Valve Opening:
  - a. Attempt to close the valve.
  - b. If the attempt is not successful, take measures to protect pipeline overpressure and product contamination. Measures may include closing the nearest upstream valve or shutting down using a Code Red shutdown.
  - c. Call out field personnel to investigate.
  - d. Conduct two-way vocal communication with the appropriate personnel to determine reasons for the unintentional valve open.
  - e. The power source for the valve must be locked and tagged out before the valve can be used again.
  - f. Do not return the valve to service until a review of the problem has been completed by the Operations Control and field management.
  - g. Document in Logmate as an AOC.
- 5. Uncommanded Valve with Error Condition:
  - a. Take measures to protect pipeline overpressure and product contamination. Measures may include closing the nearest upstream valve, shutting down using a Code Red shutdown or closing all manifold valves if this alarm initiated during a product change.
  - b. Call out field personnel to investigate.
  - c. Conduct two-way vocal communication with the appropriate personnel to determine reasons for the error status.
  - d. Do not return the valve to service until a review of the problem has been completed by the Operations Control and field management.
  - e. Document in Logmate

PRIORITY 1- ALARM			
	Description	Condition	
VAPOR/GAS DETECTOR ACTIVE			
Indicates	There is an explosive atmosphere and there is a danger of a product release.		
Response	1. Shut Down Facility and Isolate if Necessary. 2. Notify Field Personnel. 3. Notify CC Supervisor. 4. Document in Logmate as an AOC.		

ALARM TABLE NAVIGATOR				
Description	Condition	Console	Link	
	PRIO	RITY 2 – ALERT		
AC POWER FAIL	FAIL	ALL	AC POWER FAIL	
ADDITIVE INJECTION	FAIL	ALL	ADDITIVE INJECTION	
ADDITIVE COMM FAIL	ALARM	GALENA PARK MTH DELIVERIES	ADDITIVE COMM FAIL	
ADDITIVE CORROSION FAIL	ALARM	GALENA PARK MTH DELIVERIES	ADDITIVE COMM FAIL	
BUTANE BLEND FAIL	ACTIVE	ALL	BUTANE BLEND FAIL	
CAV FLARE PILOT OUT	ACTIVE	CARTHAGE PROPANE CAVERN ONLY	CAV FLARE PILOT OUT	
CAVERN HIGH LEVEL	HIGH	CARTHAGE PROPANE CAVERN ONLY	CAVERN HIGH LEVEL	
CHECK LINE UP	ACTIVE	ALL	CHECK LINE UP	
CHILLER FAULT	FAULT	CARTHAGE PROPANE CAVERN ONLY	CHILLER FAULT	
CONTROL VALVE PUMP VALVE	FAIL	ALL	CONTROL VALVE PUMP VALVE	
CONDUCTIVITY ADDITIVE	ACTIVE	ALL	CONDUCTIVITY ADDITIVE	
CORROSION ADDITIVE	ACTIVE	ALL	CORROSION ADDITIVE	
CURRENT IMBALANCE	ALARM	CONSOLE 7	CURRENT IMBALANCE	
DANIELS FAULT	FAULT	ALL	DANIELS FAULT	
DATA TRANSFER CONNECT	FAIL	CONSOLE 1	DATA TRANSFER CONN ECT	
(DEVICE) FAILS	FAIL	ALL	DEVICE FAILS	
(DEVICE) TROUBLE	ACTIVE	ALL	DEVICE TROUBLE	
DC POWER FAIL	FAIL	ALL	DC POWER FAIL	
DFM FAULT	FAULT	ALL	DFM FAULT	
ETHERNET RADIO COMM FAIL	ACTIVE	ALL	ETHERNET RADIO COM M FAIL	
EXCESSIVE STARTS	ACTIVE	ALL	EXCESSIVE STARTS	
FAULT	FAULT	ALL	<u>FAULT</u>	
FLOW	A/D FAIL	ALL	FLOW	

ALARM TABLE NAVIGATOR						
Description	Condition	Console	Link			
	PRIORITY 2 – ALERT					
FLOW HIGH	HIGH	ALL	FLOW HIGH			
FLOW HI-HI	HI-HI	ALL	FLOW HI HI			
FLOW LOW	LOW	\ ALL	FLOW LOW			
HIGH BUILDING TEMP	ACTIVE	ALL	HIGH BUILDING TEMP			
HIGH NITROGEN PRESSURE	ACTIVE	ALL	HIGH NITROGEN PRES SURE			
HIGH PRESSURE SHUTDOWNS	SHUTDOWN	ALL	HIGH PRESSURE SHUT DOWNS			
HIGH SAMPLE POT LEVEL	HIGH	ALL	HIGH SAMPLE POT LE VEL			
IFD	A/D FAIL	ALL	IFD AD FAIL			
IFD	HI-HI	ALL	<u>IFD HIHI</u>			
IFD	LOW-LOW	ALL	IFD LOWLOW			
IFD COMM FAIL		ALL	IFD COMM FAIL			
IFD	HIGH	ALL	IFD HIGH			
IFD	LOW	ALL	IFD LOW			
INVALID BATCH CODE OR PRODUCT / API / DEN / MISMATCH	ACTIVE	ALL	INVALID BATCH CODE OR PROD API DEN MIS MA			
INVALID LINE UP	ACTIVE	ALL	INVALID LINE UP			
INVALID SEQUENCE	ACTIVE	ALL	INVALID SEQUENCE			
LEAK DETECTION CABLE	FAULT	LONGHORN ONLY	LEAK DETECTION CABL E FAULT			
LEAKWARN	LOW	ALL EXCEPT LONGHORN & NH3	<u>LEAKWARN LOW</u>			
LO / NO FLOW SHUTDOWN	SHUTDOWN	ALL	LO NO FLOW SHUTDO WN			
LO SUCTION PSI SHUTDOWN	SHUTDOWN	ALL	LO SUCTION PSI SHUT DOWN			
LOW NITROGEN	LOW	ALL	LOW NITROGEN			
LOW AIR PRESSURE	LOW	ALL	LOW AIR PRESSURE			
LOW RTU DC	LOW	ALL	LOW RTU DC			
LUBRICITY INJECTION	ACTIVE	ALL	LUBRICITY INJECITON			

ALARM TABLE NAVIGATOR			
Description	Condition	Console	Link
	PRIOR	RITY 2 – ALERT	
MAINLINE FILTER	ACTIVE	ALL	MAINLINE FILTER
MANIFOLD SEQUENCE ERROR	INVALID	ALL	MANIFOLD SEQUENCE ERROR
MCC *-* RADIO COMM FAIL	ACTIVE	ALL	MCC RADIO COMM FAI
METER FACTOR NOT IMPLEMENTED	ACTIVE	ALL	METER FACTOR NOT I MPLEMENTED
METER FAILS	ACTIVE	ALL	METER FAILS
METER FAULT	ACTIVE	ALL	METER FAULT
METER DIFF PRESSURE	ALERT	ALL	METER DIFF PRESSUR E
MOP TIMER (ALL)	ACTIVE	ALL	MOP TIMER ACTIVE
MULTILIN PCM BATTERY	ACTIVE	ALL	MULTILIN PCM BATTER Y
MULTILIN TRIP	ACTIVE	ALL	MULTILIN TRIP
OMNI COMM FAIL	FAILURE	ALL	OMNI COMM FAIL
PEAK LOCKOUT	LOCKOUT	ALL	PEAK LOCKOUT
PEAK ALERT	ACTIVE	ALL	PEAK ALERT
PEDERNALES RIVER FLOW	HIGH	LONGHORN ONLY	PEDERNALES RIVER FL OW HIGH
% HEIGHT	HIGH	ALL	PERCENT HEIGHT HIG
% HEIGHT	LOW	ALL	PERCENT HEIGHT LOW
PLDS	LOW	LONGHORN & NH3 ONLY	PLDS LOW
(POWER COMPANY NAME HERE) DISCONNECT	ACTIVE	ALL	POWER COMPANY DIS CONNECT
POWER FAIL	ALARM	ALL	POWER FAIL
POWER FAIL – 110 VOLT	ALARM	REAGAN STATION	POWER FAIL 110 VOLT
POWER FAIL – 480 VOLT	ALARM	REAGAN STATION	POWER FAIL 480 VOLT
PRIMARY NETWORK MMP	WARNING	ALL	PRIMARY NETWORK M MP

ALARM TABLE NAVIGATOR			
Description	Condition	Console	Link
	PRIOR	RITY 2 – ALERT	
PRIMARY RTU ALARM	FAILURE	ALL	PRIMARY RTU ALARM
PRESS HIGH	HIGH	ALL	PRESS HIGH
PRESS LOW	LOW	ALL	PRESS LOW
PRESS LOW-LOW	LOW-LOW	NH3 AND NGL ONLY	PRESS LOW LOW
PRIMARY RTU ALARM	FAILURE	ALL	PRIMARY RTU ALARM
RED DYE INJECTION	ACTIVE	ALL	RED DYE INJECTION
RPM	HI-HI / LO-LO	ALL	RPM HI HI LO LO
RPM	A/D FAIL	ALL	RPM AD FAIL
RTU POWER FAIL	ACTIVE	ALL	RTU POWER FAIL
SLAVE RTU'S AND RTU NO REPLIES	FAIL	ALL	SLAVE RTU AND RTU NO REPLIES
SPLITTER VALVE FAILURE	FAIL	ALL	SPLITTER VALVE FAILU RE
STRAINER / FILTER DIFF PSI	HIGH	ALL	STRAINER FILTER DIFF PSI
SUMP EXCESS RUN TIME	ACTIVE	ALL	SUMP EXCESS RUN TI ME
SUMP-INNER WALL FAILURE	ACTIVE		SUMP INNER WALL FAI LURE
SUMP LEVEL – ANALOG	ні-ні	ALL	SUMP LEVEL ANALOG
SUMP RATE OF CHANGE	ACTIVE	LONGHORN ONLY	SUMP RATE OF CHAN GE
(*LOC*)*TANK #*.TANK	HI-LEVEL	ALL	LOC TANK HIGH LEVEL
TANK	HIGH.PAR	ALL	TANK HIGH PAR
TANK	LOW.PAR	ALL	TANK LOW PAR
TANK	NORM- BOTTOM	ALL	TANK NORM BOTTOM
TANK	NORM-TOP	ALL	TANK NORM TOP
TANK FARM COMM FAIL	ACTIVE	ALL	TANK FARM COMM FAI
TANK GAUGE FAIL	ACTIVE	ALL	TANK GAUGE FAIL
TANK IDLEDEV	ACTIVE	ALL	TANK IDLE DEV

	ALARM TABLE NAVIGATOR			
Description	Condition	Console	Link	
	PRIOR	RITY 2 – ALERT		
TANK SWITCH FAILURE	ACTIVE	ALL	TANK SWITCH FAILURE	
TEMP (ALL TYPES OF DEVICES)	HI/LO	CONSOLES 5 AND 6 ONLY	TEMP ALL TYPES OF DEVICES	
TEMRINAL BALANCE LOW OR HI	LO/HI	ALL	TERMINAL BALANCE L OW OR HI	
TMIX TIMEOUT - *LOC*	ZERO ALARM	ALL	TMIX TIMEOUT	
UPS FAILURE	FAIL	ALL	UPS FAILURE	
VAPOR SYSTEM FAIL	FAIL	ALL	VAPOR SYSTEM FAIL	
VALVE % OPEN HI AND LO	LOW/HI	ALL	VALVE PERCENT OPEN HI AND LO	
VFD SYSTEM FAILURE	ACTIVE	ALL	VFD SYSTEM FAIL	
WWTER OR H2O (WET/OIL/OR GAS) / (EQUIPMENT) WATER	ACTIVE	ALL	WWTER OR H20 OR W ATER DEFECT	

PRIORITY 2 – ALERT			
	Description Condition		
AC POWER FAIL FAIL			
Indicates	Indicates Indication that the commercial AC voltage has failed.		
Response	1. Notify Field Personnel.		
	2. Document in Logmate.		
	Return to ALARM TABLE NAVIGATOR	R – PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description	Condition	
	ADDITIVE INJECTION	FAIL	
Indicates	Additive injection is not functioning pro	operly.	
Response	1. Notify Field Personnel to investigat	e.	
	Return to ALARM TABLE NAVIGATOR	R – PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description	Condition	
	ADDITIVE COMM FAIL ALARM		
AE	DDITIVE CORROSION FAIL	ALARM	
	GALENA PA	RK MTH DELIVERIES	
Indicates	Indication that the communications between the field PLC and SCADA has been lost (not necessarily resulting in an additive shutdown) or that the additive injection on the Galena Park MTH deliveries has shut down.		
Response	Notify the appropriate field personnel.     Document in Logmate.		
	Return to ALARM TABLE NAVIGAT	OR – PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description	Condition	
	BUTANE BLEND FAIL	ACTIVE	
Indicates	The automated butane blending pum	p has shut down.	
Response  1. Notify the on-call operator to investigate. 2. If no contact can be made with the on-call operator or the pump will be down for motivo hours, notify the butane blending group.			
	3. Document in Logmate.		
		R – <u>PRIORITY 1</u> , <u>PRIORITY 2</u> or <u>PRIORITY 3</u>	
	Description Condition		

PRIORITY 2 – ALERT				
	CAV FLARE PILOT OUT ACTIVE			
CARTHAGE PROPANE CAVERN				
Indicates	The cavern flare pilot light has gone or	ut.		
Response	<ol> <li>Notify the on-call field personnel to</li> <li>Document the in Logmate.</li> </ol>	o go out and relight the pilot on the cavern flare.		
	Return to ALARM TABLE NAVIGATOR	R – PRIORITY 1, PRIORITY 2 or PRIORITY 3		
	Description	Condition		
	CAVERN HIGH LEVEL	HIGH		
	CARTHAGE	PROPANE CAVERN		
Indicates	The Cavern is experiencing a high lev	el alarm (set at 174921 bbls).		
Response	<ul><li>appropriate actions to secure the</li><li>2. Review other data at the location</li></ul>	er 9.02-ADM-002 Startup and Shutdown and take facility if the possibility exists that the tank is overfilled. to determine whether it is possible that the bullet/cavern is kely the result of a device malfunction.		
	3. Notify the appropriate field person	nel.		
	4. Document in Logmate.			
	Return to ALARM TABLE NAVIGATOR	R – <u>PRIORITY 1</u> , <u>PRIORITY 2</u> or <u>PRIORITY 3</u>		
Description Condition				
	CHECK LINE UP	ACTIVE		
Indicates	A reminder alarm to double check proper lineup before commencing operation.			
Response	<ol> <li>Check to ensure lineup is correct.</li> <li>Continue with control command s</li> </ol>			
	Return to ALARM TABLE NAVIGATOR	R – <u>PRIORITY 1</u> , <u>PRIORITY 2</u> or <u>PRIORITY 3</u>		
	Description	Condition		
	CHILLER FAULT	FAULT		
	CARTHAGE	PROPANE CAVERN		
Indicates	The chiller for the propane has shut down and is not cooling the incoming propane to less than 60 degrees. The chiller is only used when incoming product temperature is above 60 degrees.			
Response	<ol> <li>Notify the on-call field personnel to go out and investigate the alarm.</li> <li>Document the in Logmate.</li> </ol>			
Description Condition		Condition		
	Return to ALARM TABLE NAVIGATOR	R – PRIORITY 1, PRIORITY 2 or PRIORITY 3		
CON	TROL VALVE PUMP VALVE	FAIL		
Indicates	Indicates that the pump to the control valve has failed preventing it from functioning properly.  This restricts the flow through the control valve while a unit(s) is running. This will cause the unit(s) to shutdown on high psi if allowed to continue running.			

	PRIOR	RITY 2 – ALERT
Response	<ol> <li>Shutdown the unit(s).</li> <li>Notify the appropriate field perso</li> <li>The station does not have to be i</li> <li>Document in Logmate.</li> </ol>	nnel immediately. solated and the line does not have to be shutdown.
	Return to ALARM TABLE NAVIGATOR	R – PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
	CURRENT IMBALANCE	ALARM
Indicates	One phase of the 2400 volt power to the motor is low or has failed.	
Respons e	<ol> <li>If unit operation is required, notify</li> <li>If unit operation is not required, notify</li> </ol>	on-call technician. otification can wait until business hours.
	Return to ALARM TABLE NAVIGATOL	R – PRIORITY 1, PRIORITY 2 or PRIORITY 3

PRIORITY 2 – ALERT			
Description		Condition	
	DANIELS FAULT	FAULT	
OMNI COMM FAIL		FAILURE	
	FAULT	FAULT	
METER FAULT ACTIVE			
	DFM FAULT	FAULT	
Indicates	DANIELS FAULT ALARM – The flow computer is no longer functioning. All meter data from that flow computer is suspect.  OMNI COMM FAIL – The flow computer is no longer functioning. All meter data from that flow computer is suspect.  METER FAULT ACTIVE – The netting sequence of the applicable meter is not being completed correctly. Meter data is suspect.		
Response	<ol> <li>Notify the appropriate field personnel if line is active, and adequate backup measurement is not available.</li> <li>Notify field personnel the next business day or when the meter is needed for mainline operations, whichever comes first, if backup measurement is available.</li> </ol>		
	Return to ALARM TABLE NAVIGATO	OR - PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description Condition		
DA		FAIL  NSOLE 1 ONLY  he data interface application's connection between the	
Indicates	SCADA system and the PHD system application could not reconnect to the	m was interrupted and that the SCADA/PHD data interface	
Response	Notify a SCADA tech during not	rmal business hours.	
	Return to ALARM TABLE NAVIGAT	OR – PRIORITY 1, PRIORITY 2 or PRIORITY 3	
	Description	Condition	
	(DEVICE) FAILS FAIL (DEVICE) TROUBLE ACTIVE		
Indicates	(Device name) Fails/Troubles alert the controller that a device or process has failed and is not working properly.		
Response	Notify Field Personnel.     Document in Logmate.		
Return to ALARM TABLE NAVIGATOR – PRIORITY 1, PRIORITY 2 or PRIORITY 3			

<ol> <li>RTU will fail and go into a NO REPLY of the second of the s</li></ol>	
DC POWER FAIL  DC voltage is very low because it is no RTU will fail and go into a NO REPLY of the second s	longer being charged. When the battery is discharged, the condition.
<ol> <li>RTU will fail and go into a NO REPLY of the second of the s</li></ol>	condition.
Document in Logmate.  Return to ALARM TABLE NAVIGATOR	R _ PRIORITY 1 PRIORITY 2 or PRIORITY 3
	R - PRIORITY 1 PRIORITY 2 or PRIORITY 3
	N-INOMIT I, INOMIT E OF IMOMIT S
Description	Condition
DFM FAULT	FAULT
A Fault in the flow meter.	
Analyze and verify.     Notify Field Personnel.	
Return to ALARM TABLE NAVIGATOR	- PRIORITY 1, PRIORITY 2 or PRIORITY 3
Description	Condition
ICC *-* RADIO COMM FAIL ERNET or RADIO COMM FAIL TANK FARM COMM FAIL	ACTIVE ACTIVE ACTIVE
Indicates failure of the link between all Indicates a total failure of all communications	
normal shutdown.  2. Notify the appropriate field person	d until the alarm has been cleared. If the alarm cannot
	DFM FAULT  A Fault in the flow meter.  1. Analyze and verify. 2. Notify Field Personnel.  Return to ALARM TABLE NAVIGATOR  Description  ICC *-* RADIO COMM FAIL  ERNET or RADIO COMM FAIL  Indicates failure of the radio link betwee Indicates failure of the link between al Indicates a total failure of all communi  Note: In all cases, no analog or discretion of the indicates of the radio link between al Indicates a total failure of all communi  Note: In all cases, no analog or discretion of the link between al Indicates a total failure of all communi  Note: In all cases, no analog or discretion of the link between al Indicates a total failure of all communi  Note: In all cases, no analog or discretion of the link between al Indicates a total failure of all communi  Note: In all cases, no analog or discretion of the link between al Indicates a total failure of all communi  Note: In all cases, no analog or discretion of the link between al Indicates a total failure of all communi

PRIORITY 2 – ALERT				
	Description	Condition		
	EXCESSIVE STARTS	ACTIVE		
Indicates	Indicates the pump has run several tir restriction from using the pump will be started.	mes on and off (2-3) in a short period of time (30 min.). This e lifted anywhere from 30 to 60 minutes after the timer		
Response	<ol> <li>Notify Field Personnel.</li> <li>Document in Logmate.</li> </ol>			
	Return to ALARM TABLE NAVIGAT	OR – <u>PRIORITY 1</u> , <u>PRIORITY 2</u> or <u>PRIORITY 3</u>		
	Description	Condition		
	FAULT	ACTIVE		
	See DANIELS FAULT ALARM			
	Return to ALARM TABLE NAVIGATOR - PRIORITY 1, PRIORITY 2 or PRIORITY 3			
Description		Condition		
FLOW A/D-FAIL				
	FLOW	A/D-FAIL		
Indicates		A/D-FAIL oblem when flow rate data is beyond scale.		
Indicates	An abnormal condition or a device process.  Determine whether the high flow normal operation, such as a temporal a. If is determined it is an abnormal and an abnormal operation therefore a normal operation therefore rate cannot be returned the line can continue to operation the flow rate is restored,	oblem when flow rate data is beyond scale.  rate is a result of an abnormal operation, such as a leak or a borary flow spike or a device malfunction.  mal operation after investigation, then proceed to the 9.02-  Red – Investigation Event.  In return the line's flow rate to within the device's limits. If the to within the device limits or it is a device malfunction then		
	1. Determine whether the high flow normal operation, such as a temporal a. If is determined it is an abnorous ADM-011 Emergency – Code b. If it is a normal operation ther flow rate cannot be returned the line can continue to operation the flow rate is restored, will retain a copy within Code and the flow rate is restored.  2. Call in net meter reading operations Control.  3. Report changes in the cathe current operation. No immediately.	rate is a result of an abnormal operation, such as a leak or a corary flow spike or a device malfunction.  mal operation after investigation, then proceed to the 9.02- Red – Investigation Event.  In return the line's flow rate to within the device's limits. If the to within the device limits or it is a device malfunction then ate by:  w (taken by meter or tank gauge) every 15 minutes. When provide the recorded readings to Operations Control who Operations Control for three years.  s, pressures and calculated flow rates every hour to alculated flow rates beyond what has been normally seen in armally, a change of +/-5% of any flow rate must be reported		
	1. Determine whether the high flow normal operation, such as a temporal a. If is determined it is an abnorous ADM-011 Emergency – Code b. If it is a normal operation ther flow rate cannot be returned the line can continue to operation the flow rate is restored, will retain a copy within Code and the flow rate is restored.  2. Call in net meter reading operations Control.  3. Report changes in the cathe current operation. No immediately.	rate is a result of an abnormal operation, such as a leak or a porary flow spike or a device malfunction.  mal operation after investigation, then proceed to the 9.02-  Red – Investigation Event.  In return the line's flow rate to within the device's limits. If the to within the device limits or it is a device malfunction then ate by:  W (taken by meter or tank gauge) every 15 minutes. When provide the recorded readings to Operations Control who Operations Control for three years.  Is, pressures and calculated flow rates every hour to alculated flow rates beyond what has been normally seen in remally, a change of +/-5% of any flow rate must be reported attion until released by the Controller.		

	PRIOR	ITY 2 – ALERT
Description		Condition
FLOW HIGH		HIGH
FLOW LOW		LOW
PRESS HIGH		HIGH
	PRESS LOW	LOW
Indicates	A pressure or flow rate is outside of sorder to monitor line integrity.	et parameters. Flow and pressure parameters are set in
Response	description.  1. Contact the location and advi 2. Assist location as possible.  Movements controlled through 1. Review operations and determined through is through phone lines. 3. Follow procedure 9.02-ADM-deviation indicates to be a possible.	by phone will also denote CALLOUT in the alarm se to investigate and take local corrective actions.  SCADA mine a reason for the alarm. sing to investigate and take local actions if control function  11 Emergency – Code Red – Investigation Event if the
		R – PRIORITY 1, PRIORITY 2 or PRIORITY 3
	Description	Condition
	PRESS LOW-LOW	LOW-LOW
Indicates	A pressure is less than the hard-coded SCADA parameter, which may indicate a bubble or vapor condition.	
Response	<ol> <li>Review operations and determine a reason for the alarm.</li> <li>Follow procedures in the 9.02-ADM-011 Emergency – Code Red – Investigation Event if this investigation indicates a potential leak.</li> <li>If verified as an expected true indication, adjust pipeline hydraulics in order to raise the pressure back up above the threshold for alarm.</li> <li>If hydraulic or other changes are unable to raise the pressure above the threshold for alarm, notify the Operations Control Supervisor.</li> </ol>	
	Return to ALARM TABLE NAVIGATOR - PRIORITY 1, PRIORITY 2 or PRIORITY 3	
Description		Condition
	FLOW HI-HI	HI-HI
Indicates	Flow rate is above historic flow rate for the line segment or the maximum operating flow rate based on surge analysis. This alarm is a possible indicator of a line rupture if it is on a pump meter.	
Response	NOTE: For Eppley Airfield, if occurs more than 3 minutes after startup during normal operations, will cause line to go down and valves on each end to close. Controller must contact local (Omaha) Operator to investigate before line can be restarted.	

	PRIOR	ITY 2 – ALERT		
	.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	on and SCADA branch to determine if the alarm is possibly		
	<ol> <li>Follow the appropriate emergency procedures in the Investigation Event portion of 9.02- <u>ADM-011 Emergency – Code Red – Investigation Event</u> if the alarm is a possible indication of a leak.</li> </ol>			
	<ol> <li>Take actions to reduce the flow rate below the flow HI-HI setting if the line conditions do not indicate a possible leak.</li> </ol>			
	4. If the flow rate cannot be returned to within the device limits then shut down the line until it is repaired.			
	Description	Condition		
	FLOW LOW	LOW		
	See FLOW HIGH			
	Return to ALARM TABLE NAVIGATOR - PRIORITY 1, PRIORITY 2 or PRIORITY 3			
Description		Condition		
	HIGH BUILDING TEMP	ACTIVE		
Indicates	Indication that the building being monitored has lost ventilation or cooling and the equipment inside will over heat.			
Response	Notify Field Personnel.			
Response	2. Document in Logmate.			
	Return to ALARM TABLE NAVIGATOR - PRIORITY 1, PRIORITY 2 or PRIORITY 3			
Description		Condition		
HIGH NITROGEN PRESSURE		ACTIVE		
Indicates	The pressure on the Nitrogen Regula valve operation at the correct setting.	tor is higher than expected, which will negate Relief System		
Response	Notify Field Personnel.     Note: If the line is not active notification can be made during manned hours of operation, be the line may not be restarted until the condition has been corrected.      Document in Logmate.			

Indicates  Indicates  Indicates  Indicates  Indicates  Indicates  This type of alert is an indication that the constation out. When the pressure situation or station out. When the pressure situation controller response will be guided by product pressure".  Indicates  Indicates  Response  Indicates  Indicates  Indicates  Response  Indicates  Indicates  Indicates  Return to ALARM TABLE NAVIGATOR—Indicates  Indicates  Return to ALARM TABLE NAVIGATOR—Indicates  Return to ALARM TABLE NAVIGATOR—Indicates  Indicates  Indicates  Indicates  Indicates  Response  Return to ALARM TABLE NAVIGATOR—Indicates  Indicates  Indicates  Indicates  Indicates  Response  Response  Response  Response  Indicates  Indicates  Response  Response  Response  Indicates	PRIORITY 2 – ALERT		
Indicates  Indicates  This type of alert is an indication that the ostation or individual units are shutdown. For station out. When the pressure situation Controller response will be guided by productive pressure.  I. Notify Field Personnel 2. Adjust Pipeline Hydraulics  Return to ALARM TABLE NAVIGATOR - Description  HIGH SAMPLE POT LEVEL  Indicates  Indication that local sample pots are full asselected.  Response  Return to ALARM TABLE NAVIGATOR - Description  IFD  IFD  IFD  IFD  IFD  IFD  IFD  IF	Return to ALARM TABLE NAVIGATOR - PRIORITY 1, PRIORITY 2 or PRIORITY 3		
Indicates	SHUTDOWN		
Response  Return to ALARM TABLE NAVIGATOR -  Description  HIGH SAMPLE POT LEVEL  Indicates  Indication that local sample pots are full at selected.  Response  Return to ALARM TABLE NAVIGATOR - Indicates  Return to ALARM TABLE NAVIGATOR - Indicates  IFD  IFD  IFD  IFD  IFD  IFD  IFD  IF	This type of alert is an indication that the discharge pressure has reached a point where the station or individual units are shutdown. High Discharge Pressure Shutdowns do not lock the unit or station out. When the pressure situation is corrected, the station or unit can be restarted. Controller response will be guided by procedures and training. Note: Can also be "High Case pressure".		
Indicates Indication that local sample pots are full a selected.  Response 1. Notify Field Personnel.  Return to ALARM TABLE NAVIGATOR — EDESCRIPTION  IFD IFD IFD IFD IFD IFD IFD IFD IFD IF			
Indicates Indicates Indication that local sample pots are full a selected.  Response  Return to ALARM TABLE NAVIGATOR — E  Description  IFD  IFD  IFD  IFD  IFD  IFD comm Fall  Indicates  Response  1. Notify reading is outside of the instructed degrees API.  1. Notify the appropriate field personnel degrees API.  2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Operation.  Return to ALARM TABLE NAVIGATOR — E  Description  IFD  IFD  IFD  IFD  Indicates  The product gravity is outside the set paraternal in the product gravity is outside the product gravity in the product gravity is outside	- PRIORITY 1, PRIORITY 2 or PRIORITY 3		
Indicates Indication that local sample pots are full a selected.  Response  Return to ALARM TABLE NAVIGATOR — E  Description  IFD  IFD  IFD  IFD  IFD comm Fall  Indicates  Response  1. Notify Field Personnel.  Response  IFD  IFD  IFD  IFD  IFD  IFD  IFD  IF	Condition		
Response  Return to ALARM TABLE NAVIGATOR — E  Description  IFD  IFD  IFD  IFD  IFD  IFD  IFD  IF	HIGH		
Return to ALARM TABLE NAVIGATOR – E  Description  IFD  IFD  IFD  IFD  IFD  IFD  IFD  IF	Indication that local sample pots are full and require attention, or that a different pot should be		
Pescription  IFD  IFD  IFD  IFD  IFD COMM FAIL  Indicates  The gravity reading is outside of the instructed degrees API.  1. Notify the appropriate field personnel degrees API.  2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Operation.  Return to ALARM TABLE NAVIGATOR — Description  IFD  IFD  Indicates  The product gravity is outside the set paraterns.			
IFD IFD IFD IFD COMM FAIL  Indicates  The gravity reading is outside of the instructed degrees API.  1. Notify the appropriate field personnel 2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Opera 3. Document in Logmate.  Return to ALARM TABLE NAVIGATOR — Description  IFD IFD IFD Indicates  The product gravity is outside the set para	Return to ALARM TABLE NAVIGATOR – PRIORITY 1, PRIORITY 2 or PRIORITY 3		
IFD IFD IFD COMM FAIL  Indicates  The gravity reading is outside of the instructed degrees API.  1. Notify the appropriate field personnel 2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Opera 3. Document in Logmate.  Return to ALARM TABLE NAVIGATOR — Description  IFD IFD Indicates  The product gravity is outside the set para	Condition		
IFD IFD COMM FAIL  Indicates The gravity reading is outside of the instructed degrees API.  1. Notify the appropriate field personnel 2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Opera 3. Document in Logmate.  Return to ALARM TABLE NAVIGATOR — Description  IFD IFD IFD Indicates The product gravity is outside the set para	A/D-FAIL		
Indicates  The gravity reading is outside of the instructed degrees API.  1. Notify the appropriate field personnel 2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Opera 3. Document in Logmate.  Return to ALARM TABLE NAVIGATOR – IFD  IFD  Indicates  The product gravity is outside the set para	HI-HI		
Indicates  The gravity reading is outside of the instructed degrees API.  1. Notify the appropriate field personnel 2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Operation  Return to ALARM TABLE NAVIGATOR — Description  IFD  IFD  Indicates  The product gravity is outside the set paratematical parameters.	LOW-LOW		
degrees API.  1. Notify the appropriate field personnel 2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Opera 3. Document in Logmate.  Return to ALARM TABLE NAVIGATOR – IDESCRIPTION  IFD  IFD  Indicates  The product gravity is outside the set para	ACTIVE		
Response  2. All incoming batch changes require the Refer to 9.02-ADM-017 Normal Operation  3. Document in Logmate.  Return to ALARM TABLE NAVIGATOR – Important to the product gravity is outside the set parates.	ument's scale. Generally the scale is set at 25-75		
Refer to 9.02-ADM-017 Normal Opera 3. Document in Logmate.  Return to ALARM TABLE NAVIGATOR – I  Description  IFD  IFD  Indicates  The product gravity is outside the set para			
Return to ALARM TABLE NAVIGATOR – I  Description  IFD  IFD  Indicates  The product gravity is outside the set para	All incoming batch changes require the location to be manned during an INTERFACE FAIL.  Refer to 9.02-ADM-017 Normal Operations and Line Monitoring.      Province to be agreed to be a great to		
Description  IFD  IFD  Indicates  The product gravity is outside the set para	PRIORITY 1 PRIORITY 2 or PRIORITY 3		
IFD IFD Indicates The product gravity is outside the set para	Condition		
IFD Indicates The product gravity is outside the set para	HIGH		
Indicates The product gravity is outside the set para	LOW		
1 Pavious energians and determine a r	rameters. It is used to detect a product change.		
Response 2. Reset the parameters when the produce result of an expected change in produce.	<ol> <li>Review operations and determine a reason for the alarm.</li> <li>Reset the parameters when the product gravity levels out (when appropriate) if the alarm is a result of an expected change in product.</li> </ol>		